

# High-temperature pressure sensor for combustion engine measurements

Type 6052C...

Patent No. US 6,105,434

High-temperature pressure sensor with very small dimensions are ideal for use in internal combustion engines with complex structural geometry of the cylinder head. The sensor is installed with front sealing in an M5x0.5 bore.

- Good temperature stability of the sensitivity
- High sensitivity
- Low thermal shock error
- Long service life due to front seal

### Description

Type 6052C... uses a piezoelectric crystal which achieves high sensitivity in conjunction with an extremely small sensor structure. This sensitivity varies by not more than  $\pm 0.5\%$  in the temperature range from 150 ... 250 °C. The passive acceleration compensation patented by Kistler keeps the influence of engine vibrations to a minimum.

The front seal provides very good heat transfer and keeps the sensor at a save operating temperature. The optimized diaphragm produces good measuring results and ensures a long service life.

### Application


The sensor Type 6052C... is an excellent all-rounder. Its rugged construction makes it suitable for measurements at the knock limit as well as for thermodynamic investigations. This sensor is used mainly for complex cylinder head geometry. As well as for motor cycles and other small engines and for combustion analysis in vehicles.

For applications mainly in the knocking range or at very high peak pressures, use of Type 6052C...U20 with reinforced diaphragm (heavy duty version) is recommended.

Type 6052C...U40 is provided with additional damping and is suitable for applications on engines with extremely high vibrations, e.g. racing engines, but with a limited temperature range.

For standard applications, a rugged metal braided PFA cable is recommended. If the sensor plug is directly exposed to the engine oil, e.g. when installing through the valve cover, the oil-tight FPM cable is recommended.

Massbild / Dimension drawing  
Sensor Type 6052C-3-  
6052CU\_0-3\_

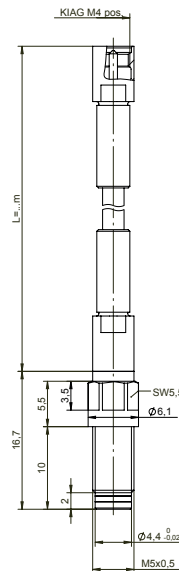

### Technical data

#### Type 6052C...

Measuring range	bar	0 ... 250
Calibrated partial ranges	bar	0 ... 50, 0 ... 100, 0 ... 150, 0 ... 250
Overload	bar	300
Sensitivity	pC/bar	$\approx -20$
Natural frequency (measuring element)	kHz	$\approx 160$
Linearity, all ranges (at 23 °C)	%/FSO	$\leq \pm 0.3$
Acceleration sensitivity		
axial	mbar/g	$< 0.8$
radial	mbar/g	$< 0.5$
Operating temperature range	°C	-20 ... 350
Temperature min./max.	°C	-50 ... 400
Sensitivity change		
200 °C $\pm$ 50 °C	%	$\leq \pm 0.5$
23 ... 350 °C	%	$\leq \pm 2$
Thermal shock error		
(at 1 500 1/min, IMEP = 9 bar)		
$\Delta p$ (short-term drift)	bar	$\leq \pm 0.5$
$\Delta p_{mi}$	%	$\leq \pm 2$
$\Delta p_{max}$	%	$\leq \pm 1$

6052C\_000-552e-02.20



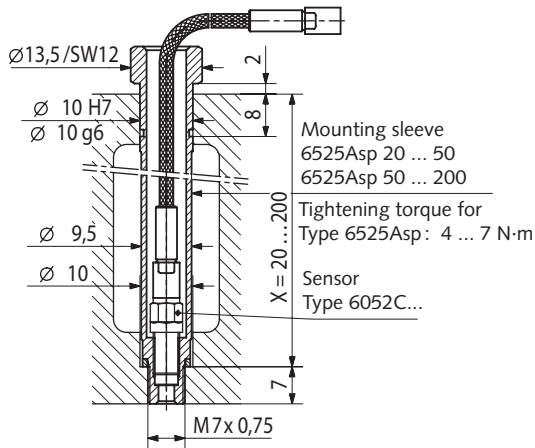


Fig. 3: Using the mounting sleeve

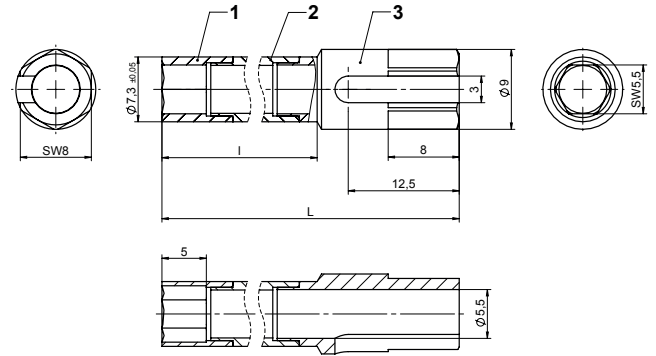


Fig. 4: Mounting key SW 5.5  
Type 1300A9 with I = 204/L = 220  
Type 1300A9Q02 with I = 239/L = 255

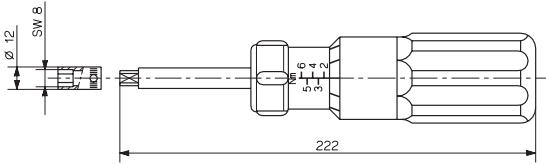


Fig. 5: Torque wrench 1 ... 6 N·m Type 1300A17

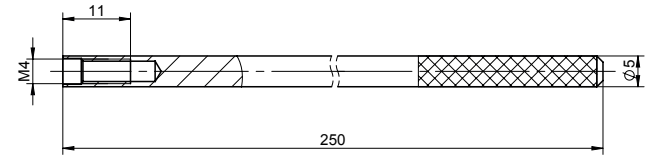


Fig. 6: Extraction tool for dummy sensor Type 1319

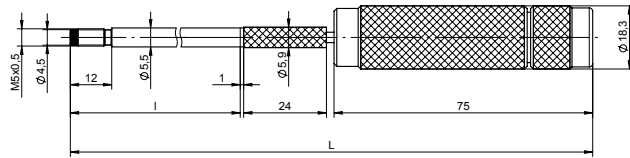


Fig. 7: Finishing tool for bore  
Type 1300A79 with I = 60/L = 162  
Type 1300A79Q01 with I = 170/L = 173  
Type 1300A79Q02 with I = 220/L = 232

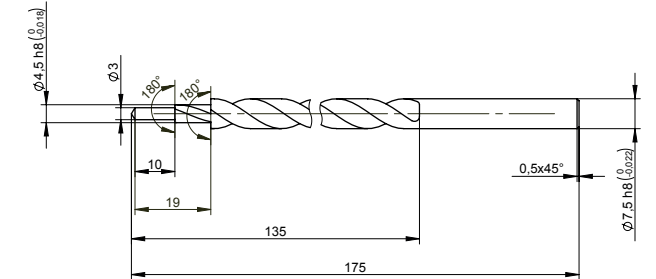


Fig. 8: Step drill Type 1300A51

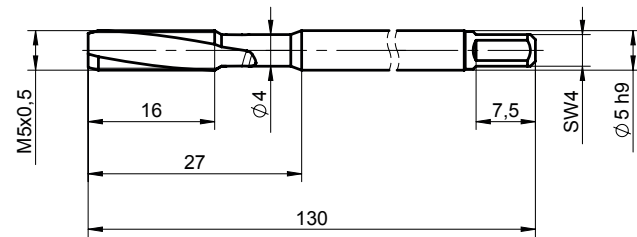


Fig. 9 : Special tap M5x0.5 Type 1357A

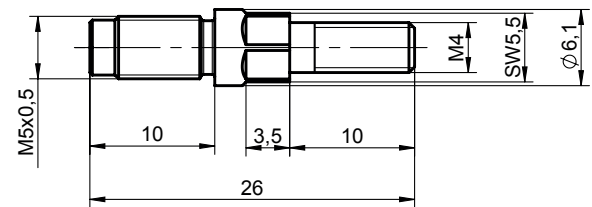


Fig. 10: Dummy sensor Type 6445 (for Type 6052...)

6052C\_000-552e-02.20

**Scope of delivery**

- Pressure sensor
- Connecting cable acc. to ordering key
- Calibration certificate
- Adapter M4 neg. – BNC pos. (not for PiezoSmart)

**Type/Art. No.**  
6052C

1705

**Optional accessories**

- PiezoSmart extension cable
  - L = 1 m 1987B1
  - L = 2 m 1987B2
  - L = 10 m 1987B10
- Replacement connecting cables, PFA steel braiding
  - L = 1 m 1929A1
  - L = 2 m 1929A2
  - L = 3 m 1929A3
  - with PiezoSmart, L = 1 m 1985A1S311
  - with PiezoSmart, L = 2 m 1985A1S321
  - with PiezoSmart, L = 3 m 1985A1S331
- Replacement connecting cables, FPM oil-tight
  - L = 1 m 1983AA1
  - L = 2 m 1983AA2
  - L = 3 m 1983AA3
  - with PiezoSmart, L = 1 m 1985A1S711
  - with PiezoSmart, L = 2 m 1985A1S721
  - with PiezoSmart, L = 3 m 1985A1S731
- Adapter M4 neg. – KIAG 10-32 neg. 1700A13
- Dummy sensor 6445
- Extrac. tool for dummy sensor Type 6445 1319
- Mounting sleeve M7x0.25 (custom made) 6525ASP...
- Adapter for pressure generator Type 6904 6585A
- Step drill 1300A51
- Tap M5x0.5 1357A
- Mounting key SW 5.5 L = 220 1300A9
- Mounting key SW 5.5 L = 255 1300A9Q02
- Torque wrench 1 ... 6 N·m 1300A17
- Finishing tool for bore
  - bore depth ≤60 mm 1300A79
  - bore depth ≤170 mm 1300A79Q01
  - bore depth ≤220 mm 1300A79Q02
- Engine adapter
  - M8x0.75 6595
  - M10x1/SW12 6595A1
  - M10x1/SW10 6595A1Q01
  - M14x1.25 6585AQ01

**Ordering key**

**Version**

Standard	
Reinforced diaphragm	U20
Additional damping	U40

**PiezoSmart**


Without PiezoSmart (standard)	-
With PiezoSmart (standard)	S

**Cable version**

PFA with steel braiding (standard)	3
FPM oil-proof	7

**Cable length**

1 m (standard)	-1
2 m (standard)	-2
3 m (standard)	-3

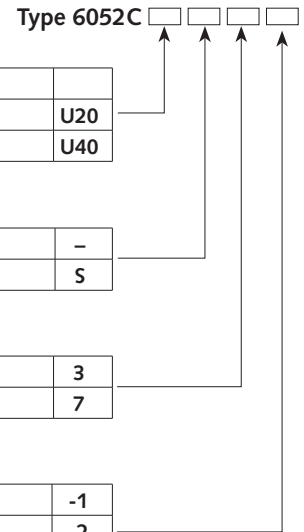

**Ordering examples:**

Standard sensor with PiezoSmart and 2 m FPM cable (oil-proof):  
Type 6052CS7-2  
Standard sensor without PiezoSmart and 1 m PFA steel braid  
cable: Type 6052C-3-1

6052C\_000-552e-02.20