

Media release

NPE 2018:

Kistler Breaks New Ground with Custom Monitoring System for Injection Molding

Orlando, FL. May 7, 2018 – At NPE 2018, the Kistler Group is showcasing its latest custom monitoring package for ComoNeo, its high-quality process monitoring system that is designed to deliver efficiency and transparency for injection molding. Unlike ever before, system users can assemble their own package from the vast range of functions available in the system.

ComoNeo is the system of choice for plastics processing companies looking to boost product quality and cost efficiency by optimizing their injection molding processes. Kistler is constantly developing this process monitoring system – not only to accommodate new application cases but also to ensure comprehensive optimization in every respect coupled with maximum cost efficiency.

Based on the measurement of cavity pressure with tried-and-tested sensors from Kistler, users are provided with modular functions to support predictive control of the injection molding process leading to optimum results. Support, monitoring, control and prediction make Version 2.1.0 of Kistler's ComoNeo the leader in process transparency, which is essential for Industry 4.0.

ComoNeo: guiding users to desired results

A key benefit of this system is its ability to support users according to their individual levels of know-how. Kistler has integrated a practical prediction tool into ComoNeo: the Stasa QC software, which uses measured values and statistical analyses to calculate the quality of the manufactured components in advance, and to assess them within the tolerance bands. This special type of process monitoring is particularly useful for manufacturers of high-grade parts – in medical technology or other sectors where safety is critical, for instance.

To ensure optimal product quality and cost efficiency for their injection molding processes, customers can tailor their own ComoNeo with these functions:

- **ComoNeoPREDICT** Allows model-based prediction of specified part quality based on the cavity pressure and temperature profiles – for optimum process parameters and transparent processes.
- **ComoNeoMERGE** When multiple materials are used, process technology becomes more complex – but ComoNeo 2.1.0 can easily accommodate this challenge. The system monitors and evaluates up to four components with different mold technologies.
- **ComoNeoMULTIFLOW** For molds with multiple cavities, this option allows hot runner balancing through individual adjustment of the nozzle temperature – to ensure identical injection conditions in all cavities and automatic correction of deviations.
- **ComoNeoSWITCH** This function ensures automated switchover from the injection phase to the holding phase at the ideal time – for balanced injection behavior and optimum mold protection during the process.

- **ComoNeoCOMPOSITE** Another new feature: injection molding with the RTM process can now be optimized. Special RTM sensors from Kistler create the conditions for controlled high-quality machining of long-fiber composites.
- **ComoNeoGUARD** This function helps users to define monitoring windows that enable accurate separation of good and bad parts on a step-by-step basis. The benefits: guaranteed part quality and less pseudo scrap.
- **ComoNeoRECOVER** This feature makes it possible to reproduce a proven injection molding process on a different machine. The user is guided through the adaptation step by step, deviations are identified and the assistant suggests corrective actions.

ComoDataCenter: transparent processes enhance quality and cut costs


As soon as ComoNeo has been specifically tailored to your individual application, everything quite literally comes together in the ComoDataCenter, a database that stores all the process data and establishes a seamless communication with overarching systems. Users benefit from the comprehensive overview of their entire injection molding production, which ultimately provides for a sound basis for ongoing analysis and optimization.

“We’re offering companies a complete modular and multifunctional package that fulfils all the requirements for intelligent and efficient injection molding. ComoNeo is Industry 4.0 put into practice,” said Dr. Robert Vaculik, Head of Kistler’s Strategic Business Field Plastics. “Mastery of new processes and greater levels of complexity shows the full extent of what injection molding can achieve in terms of quality – and the potential of process-integrated quality monitoring is far from being exhausted. Development is certainly set to continue.”

Kistler looks forward to welcoming you at NPE in Orlando from May 7 to 11, 2018. Visit Kistler at booth W7145. For more information and to watch a video on ComoNeo, go to:

www.kistler.com/comoneo

ComoNeo Overview Product & Features

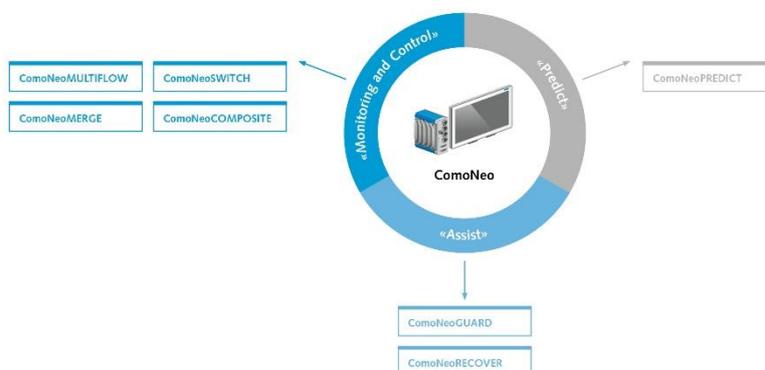

Caption: ComoNeo by Kistler: This unique system’s combination of complementary functions is the key to individual, holistic optimization of injection molding production.

About the Kistler Group

Kistler is the global leader for dynamic pressure, force, torque and acceleration measurement technology. Cutting-edge technologies provide the basis for Kistler's modular solutions.

Customers in industry and scientific research benefit from Kistler's experience as a development partner, enabling them to optimize their products and processes so as to secure sustainable competitive edge. Unique sensor technology from this owner-managed Swiss corporation helps to shape future innovations not only in automotive development and industrial automation but also in many newly emerging sectors. Drawing on our extensive application expertise, and always with an absolute commitment to quality, Kistler plays a key part in the ongoing development of the latest megatrends. The focus is on issues such as electrified drive technology, autonomous driving, emission reduction and Industry 4.0.

Some 1 860 employees at 61 facilities across the globe are dedicated to the development of new solutions, and they offer application-specific support at the local level. Ever since it was founded in 1959, the Kistler Group has grown hand-in-hand with its customers and in 2017, it posted sales of CHF 422 million. About 8% of this figure is reinvested in research and technology – with the aim of delivering better results for every customer.

Media contact:

Angela Venditti

Marketing Supervisor

Phone: +1 248 668 6824

Email: angela.venditti@kistler.com

Kistler Group

Eulachstrasse 22
8408 Winterthur
Switzerland

Tel. +41 52 224 11 11
Fax +41 52 224 14 14
info@kistler.com

ZKB Winterthur BC 732
Swift: ZKBKCHZZ80A
Account: 1132-0374.628

IBAN: CH67 0070 0113 2003 7462 8
VAT no.: 229 713
ISO 9001 certified